

## BYPASSING ZONES

If you wish to bypass one or more zones, this must be done while the system is in the disarmed state. The following steps are used for bypassing zones:

- Step 1 Press the [BYPASS] key.
- Step 2 Enter user code, if required (optional). The *bypass light* flashes.
- Step 3 Enter 1 or 2 digits indicating the zone you wish to bypass, i.e. press the [1] key for zone 1, press [1]-[2] for zone 12.
- Step 4 Press the [BYPASS] key again.
- Step 5 The corresponding *zone light* will illuminate indicating the zone has been bypassed. Repeat steps 3 and 4 for any other zone(s) that need to be bypassed.
- Step 6 Press the [BYPASS] key again -or- press the [#] key to exit the Bypass Mode. The *bypass light* will stop flashing upon exiting the Bypass Mode.

## GROUP BYPASS

By pressing the [BYPASS] key, followed by the [0] key, then the [BYPASS] key again, all zones that are designated as group bypass zones will be bypassed. Press the [BYPASS] key again to exit group bypassing.

## UNBYPASSING

To manually unby-pass zones, perform the bypassing procedure on a zone that is already bypassed. The corresponding light for that zone will go off when unby-passed. **NOTE: All zones will automatically be unby-passed each time the system is disarmed.**

## TURNING THE DOOR CHIME ON AND OFF

The door chime is turned on or off by pressing the [CHIME] key while the system is in the disarmed state. If the chime is on the *chime light* will be illuminated. If the chime is off, the *chime light* will be off. Each press of the [CHIME] key will toggle the chime feature on/off and produce a momentary ding-dong sound.

## ADDING AND CHANGING USER CODES

Your system must be **Disarmed** to change user codes.

- Step 1 Press [\*]-[5]-["Master Arm/Disarm" Code].

**NOTE:** For partitioned systems, someone changing the code of another person must have access to all or more partitions than the user being changed.

- Step 2 The *ready light* will flash.
  - Step 3 Enter the 2 digit "user number" (always enter 2 digit such as [0]-[3] for user 3, or [5]-[2] for user 52).
  - Step 4 The zone lights will illuminate specifying the first digit of the "user code". (Lights 1-8 on = code is blank, lights 1-8 off = "0", lights 1 and 8 = "9").
- NOTE:** To delete a user code, enter [\*]-[\*]-[\*]-[\*] for a 4-digit code, or [\*]-[\*]-[\*]-[\*]-[\*]-[\*] for a 6-digit code.
- Step 5 The *ready light* will flash indicating you are back at Step 2 above. If the code is rejected, the sounder will beep 3 times.
  - Step 6 If another "user code" needs to be programmed, return to Step 3.
  - Step 7 Press the [#] key while the *ready light* is flashing to exit the User Code Programming Mode.

## ASSIGNING USER CODE AUTHORITY LEVELS

Assign authority levels to users by following the steps below. Assign user codes before assigning authority levels.

- Step 1 Press [\*]-[6]-["Master Arm/Disarm Code"].

**NOTE:** Someone changing the authority of another person can only add or remove partition authorization for partitions to which they have access.

- Step 2 The *ready light* will flash.
- Step 3 Enter the 2 digit "user number" to be assigned authority (The *ready light* is constant and the *instant light* will flash).
- Step 4 Lights illuminated indicate the authority levels assigned to this code. An explanation of the lights is listed in the following table.