



## **TURNING ON THE CHIME FEATURE**

If checked, your security system will operate in the "CHIME" mode, allowing the monitoring of pre-designated zones while the security system is not armed. While in the "CHIME" mode, the opening of any of these zones will produce a 1-second beep from the keypad control. To use this feature, press the "CHIME" digit (this digit has been selected by your installing company and is noted on page 1). Five seconds after pressing the "CHIME" digit, a beep will occur indicating that this feature has been activated. Repeat this procedure to turn the "CHIME" feature off.