


BYPASSING ZONES

If you wish to bypass one or more zones, this must be done while the system is in the disarmed state. The following steps are used for bypassing zones:

- Step 1 Press the [**BYPASS**] key.  Not Required
- Step 2 Enter user code, if required (optional). The *bypass light* flashes.
- Step 3 Enter 1 or 2 digits indicating the zone you wish to bypass. (Example: Press the [**1**] key for zone 1, press [**1**] - [**2**] for zone 12.)
- Step 4 Press the [**BYPASS**] key again.
- Step 5 The corresponding *zone light* will illuminate indicating the zone has been bypassed. Repeat steps 3 and 4 for any other zone(s) that need to be bypassed.
- Step 6 Press the [**BYPASS**] key again -or- press the [#] key to exit the Bypass Mode. The *bypass light* will stop flashing upon exiting the Bypass Mode.