

TURNING THE DOOR CHIME ON AND OFF

The door chime is turned on or off by pressing the [**CHIME**] key while the system is in the disarmed state. If the chime is on the *chime light* will be illuminated. If the chime is off, the *chime light* will be off. Each press of the [**CHIME**] key will toggle the chime feature on/off and produce a momentary ding-dong sound.