

HOW TO BYPASS ZONES

To bypass any of the zones, disarm the control and press [*****], zone number(s) to be bypassed, and [*****]. Zone numbers less than 10 must be preceded by a zero (for example, 01, 02, 03). Zones cannot be bypassed or unbypassed while the control is in the armed state. Upon disarming, all bypassed zones will be unbypassed. As bypassed zones are not protected, the bypass procedure should only be given to authorized persons.