

# QUICK VIEW OF SYSTEM FUNCTIONS

**NOTE:**     = Boxes represent the entering of your 4-digit user code.

## SECURITY FUNCTIONS

- Checking system status: -----  STATUS
  - To arm in STAY mode: -----     \* +  STAY
  - To restart exit delay: -----     \* +  STAY OR  STAY (only if programmed and system is armed in Stay mode.)
  - To arm in AWAY mode: -----     \* +  AWAY
  - To arm with NO DELAY: -----     \* +  AWAY or  STAY +  NO DELAY
  - To arm if Quick Arm is active: -----  AWAY or  STAY (hold down for at least 2 seconds)
  - To disarm system and silence alarms:     +  OFF
- Note:** During Entry Delay or when an Alarm Condition exists, the LynxSIA Plus can be disarmed by entering the User Code. Entering the OFF key is not required
- To bypass a zone(s): -----     +  BYPASS + 2-digit zone number(s)
  - To turn Chime mode on or off: -----  FUNCTION +  CHIME**

\* Security code is not required if Quick Arm is active. Instead, press and hold down the  STAY or  AWAY key.

## MESSAGE CENTER

- To record a message: -----  FUNCTION +  RECORD
- To stop recording before end of 85 secs:  OFF
- To play back a message: -----  FUNCTION +  PLAY
- To skip a message:-----  [\*]
- To delete all messages: -----  FUNCTION +  DELETE (during message replay)

## VOLUME ADJUSTMENT

- To adjust message playback/announcement volume:  FUNCTION +  VOLUME +  [3] or  [6]**
- To mute system announcements: -----  FUNCTION +  VOLUME +  OFF**
- To restore/unmute announcements:----  FUNCTION +  VOLUME +  [3] or  [6]**

## SPEAKER PHONE OPERATION

- To enter speaker phone mode: -----  [#] +  AUX
- To exit speaker phone mode: -----  OFF
- To enable/disable (toggle) ringer: -----  [#] +  VOLUME +  AUX
- To return keypad to telephone mode (after clearing an alarm or trouble or disarming the system):  [#] +  AUX
- To flash (switch back and forth between two calls using call waiting):  AUX

(wait at least two (2) seconds before pressing AUX again)