

## BYPASSING PROTECTION ZONES

### 6 Using the BYPASS Key

**LIMITATION**  
The system will not allow fire zones to be bypassed.

All bypasses are removed when an OFF sequence (security code plus OFF) is performed.

This key is used when you want to arm your system with one or more zones intentionally unprotected. The system must be disarmed first.

1. Enter your security code and press the **BYPASS** key.
2. Enter the zone number(s) for the zone(s) to be bypassed (e.g., 06, 10, 13, etc.). *Single digit zone numbers must be preceded by a zero (e.g. 05, 06).*
3. When finished, the keypad will momentarily display a "Bypass" message for each bypassed zone number. Wait for these zones to be displayed, to confirm their bypass.
4. Arm the system as usual.


**Bypassed zones are unprotected and will not cause an alarm if violated while your system is armed.**

- TO BYPASS ZONES:**
- Enter Code.
  - Press **Bypass** Key.
  - Enter Zone Nos.
  - Wait For Bypassed Zones To Be Displayed.
  - Arm System As Usual.

TYPICAL MOMENTARY DISPLAYS OF BYPASSED ZONE



ALPHA

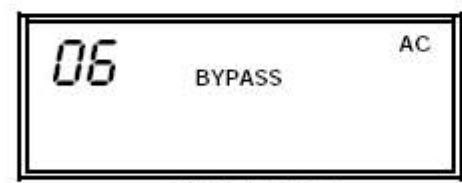

FIXED-WORD